


TROUBLESHOOTING LEAKING AIR SHAFTS

First Step - Tighten down the crimp lugs (Part # 9). It's rare, but if a crimp lug is loose, air will escape from the bladder.

Second Step - Check if air is coming out of the air valve. If so, it could be the be the rubber O-Ring (Part # 11). Replace O-Ring.

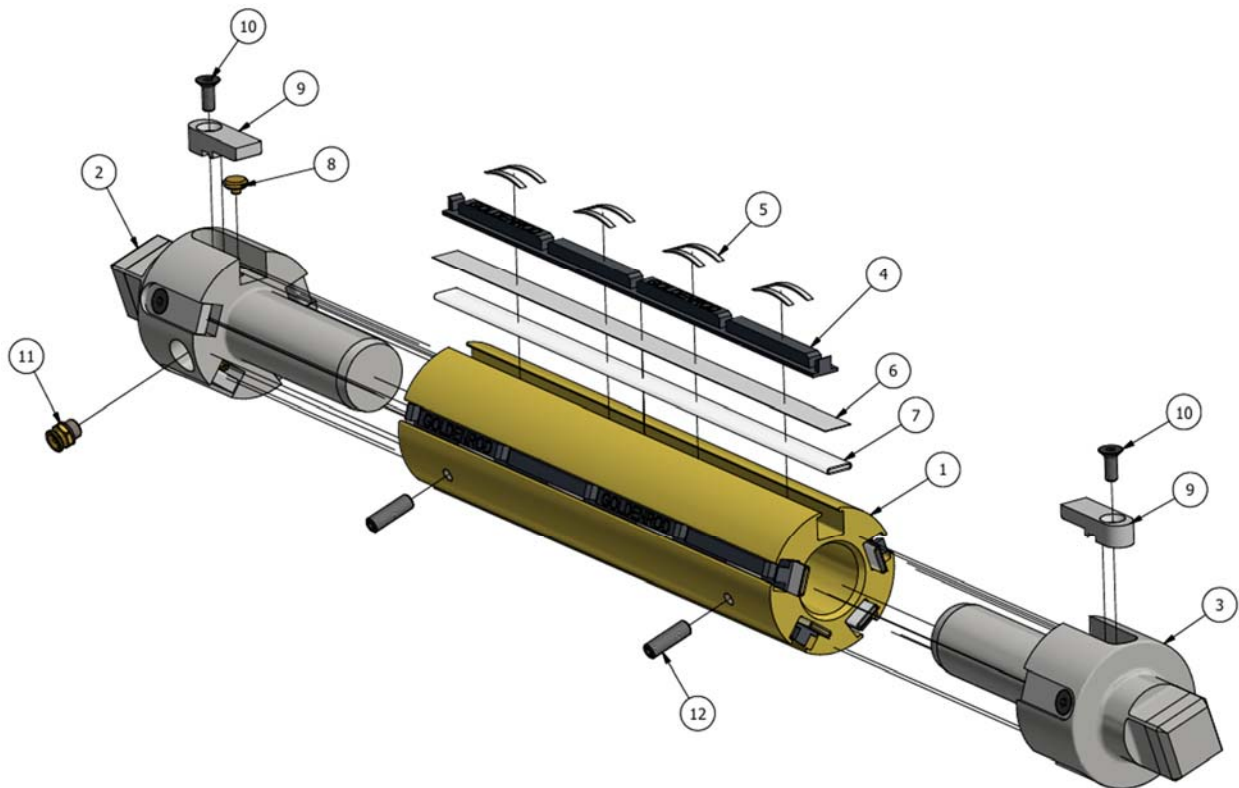

Third Step - Check if Air Bladder(s) are leaking by spraying soapy water on air shaft. Click on hyperlink and view “Air Shaft Troubleshooting & Repair” video on YouTube

<https://youtu.be/hR4xTYCxAjU>



1-800-GOLDROD (465-3763)